

HDANYWHERE

Seamless **Entertainment** Discreet **Technology**.

Updating MHUB firmware using the Update Utility tool

Introduction

HDANYWHERE MHUB systems may require a firmware update to add new features, improve stability or resolve minor bugs.

This guide walks you through the update process.

****You will require a PC on the same network as the MHUB system you are updating.**




Update Utility

To update the firmware we are going to use the 'Update Utility' desktop software.


Updates can be done via RS232 or over I.P. This guide will use the I.P. method.

1. Click IP, then SEARCH
2. The software will then search your local network for any MHUB systems

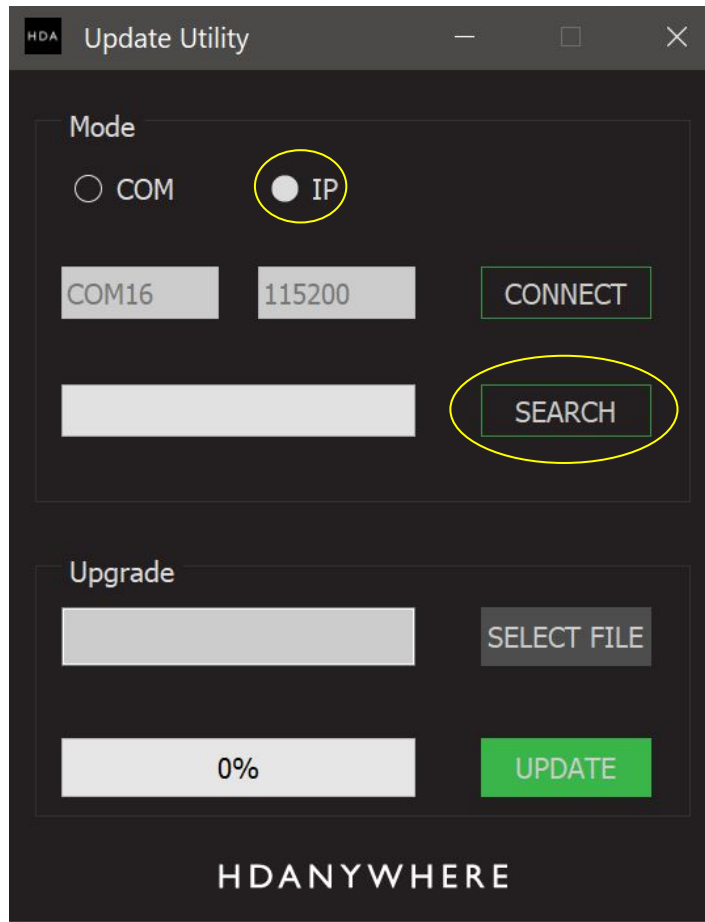

Update Utility

3. Any MHUB systems found will be listed in the drop down menu.
4. Select the system you wish to update and click connect.

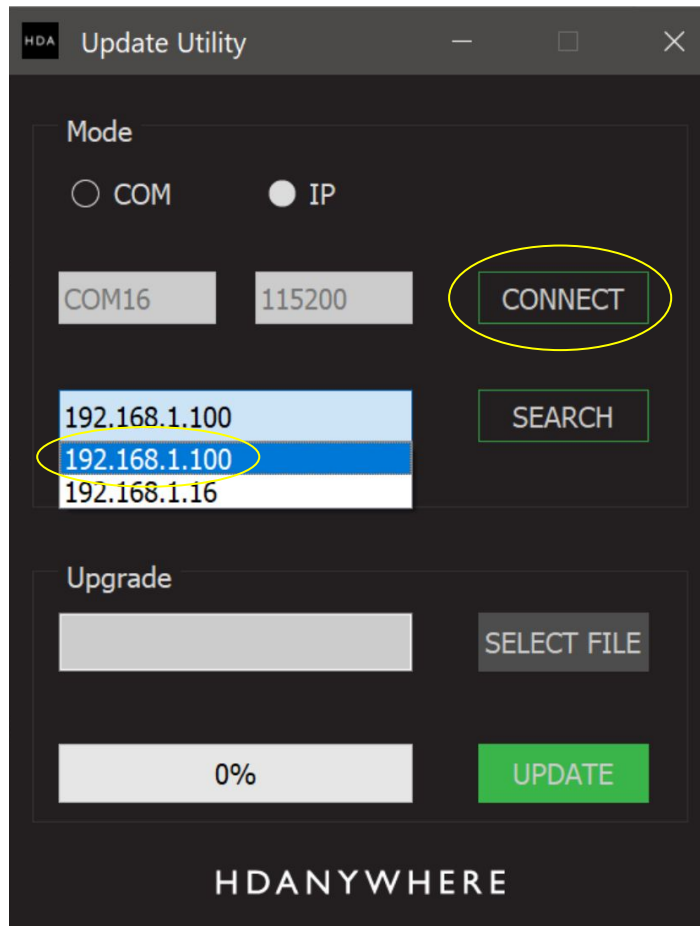

Update Utility

5. The current firmware will be displayed in the top right corner.
6. Now select the firmware file you wish to install on the MHUB using the browser window that opens when you click SELECT FILE.
7. Click UPDATE, this will install the firmware. Progress will be shown in the bar to the left of the button and with a percentage count.

